



*Assembled furniture
is heavy. Assemble
at place of use.*

KOR Modular and Spanner Table Assembly Instructions

Congratulations on the purchase of your Tropitone® KOR Modular Components. Read through all steps before fastening components together.

CAUTION: Do not try to lift or flip furniture components with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

Tools Required

7/16" Combination Wrench

Safety Glasses

Parts List per Sectional Unit

- (1) Modular Component (MC, ML, MR, or CC)
- (2) Connecting Brackets (MC, ML, MR, or CC)
- (4) 1/4 x 7/8" Hex Head Bolts (MC, ML, MR or CC)

- (4) 1/4" Lock Washers (MC, ML, MR, & CC)
- (1) Seat Cushion
- (1) Back Cushion

Parts List per Spanner Table

- (1) Spanner Table
- (8) 1/4 x 3/4" Hex Head Bolts

- (8) 1/4" Lock Washers

✓ Check that all items listed in the Parts List are in your carton.

Modular Component Assembly


Step 1

Modular Components can be assembled in upright position. By reaching under furniture with cushions removed, the attachment locations may be accessed.

Step 2

Align Modular Components to be ready for assembly.

At the front and rear of the Modular Components that are being joined together, attach a connecting Bracket to join the items using (1) 1/4-20 x 7/8" Hex Head Bolts fitted with (1) 1/4" Lock Washer through the holes in the brackets into the threaded holes at the front and back of the components. Threaded holes are located below the cushion under sling near the front of the furniture components. Tighten bolts hand tight in both locations.

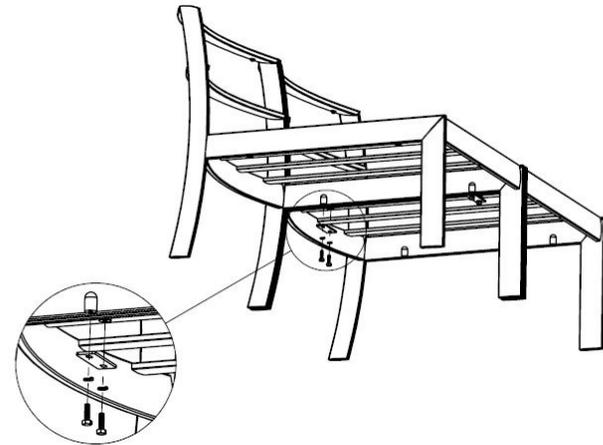

Fully Tighten bolts in both locations using a 7/16" combination wrench.

Step 3

Repeat Step 2 for each additional Modular Component until all items are fastened together into the desired configuration.

Step 4

Place the seat cushions onto each Modular Component with Velcro attachment straps facing down and to the rear. Wrap attachment straps around cross member bracing on furniture component seat and engage Velcro 1 place on MC, ML, and MR, and 3 places on CC.

Place the seat backs onto each Modular Component with Velcro attachment straps facing rear. Wrap attachment straps around cross member bracing on furniture component back and engage Velcro 2 places on MC, ML, and MR, and 3 places on CC.

Spanner Table Assembly


Step 1

Modular Components can be assembled in upright position. By reaching under furniture with cushions removed, the attachment locations may be accessed.

Step 2

Align Modular Components to be ready for assembly.

At the front and rear of the Modular Components that the Spanner Table is being joined to, attach a connecting Bracket to join the items using (1) 1/4-20 x 3/4" Hex Head Bolts fitted with (1) 1/4" Lock Washer through the holes in the brackets into the threaded holes at the front and back of the Components. Tighten bolts hand tight in both locations. Repeat for second side of the Spanner Table. Fully tighten all bolts.

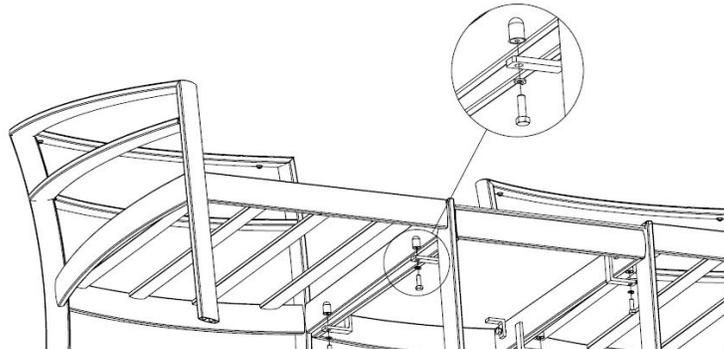

Tropitone®



MORE INFORMATION

For care and cleaning instructions, refer to the Tropitone® Care, Maintenance, Safety & Warranty Information guide included with your furniture and available at www.tropitone.com/warranty.

Additional care information, "How To" videos and assembly instructions for Tropitone Outdoor Furniture and Basta Sole shade products are also available at our website.

If you have difficulty understanding any of the instructions and need assistance while assembling your KOR Components, please call Tropitone's Customer Service Center at 949-951-2010.



Tropitone Furniture Co., Inc.
5 Marconi, Irvine, CA 92618

949 951 2010 phone
www.tropitone.com

Part # R9T00027
Revised: 05.25.2017
©2017 Tropitone Furniture Co., Inc.